Schaltplan ZX750 L (US- und Kanadisches Model)

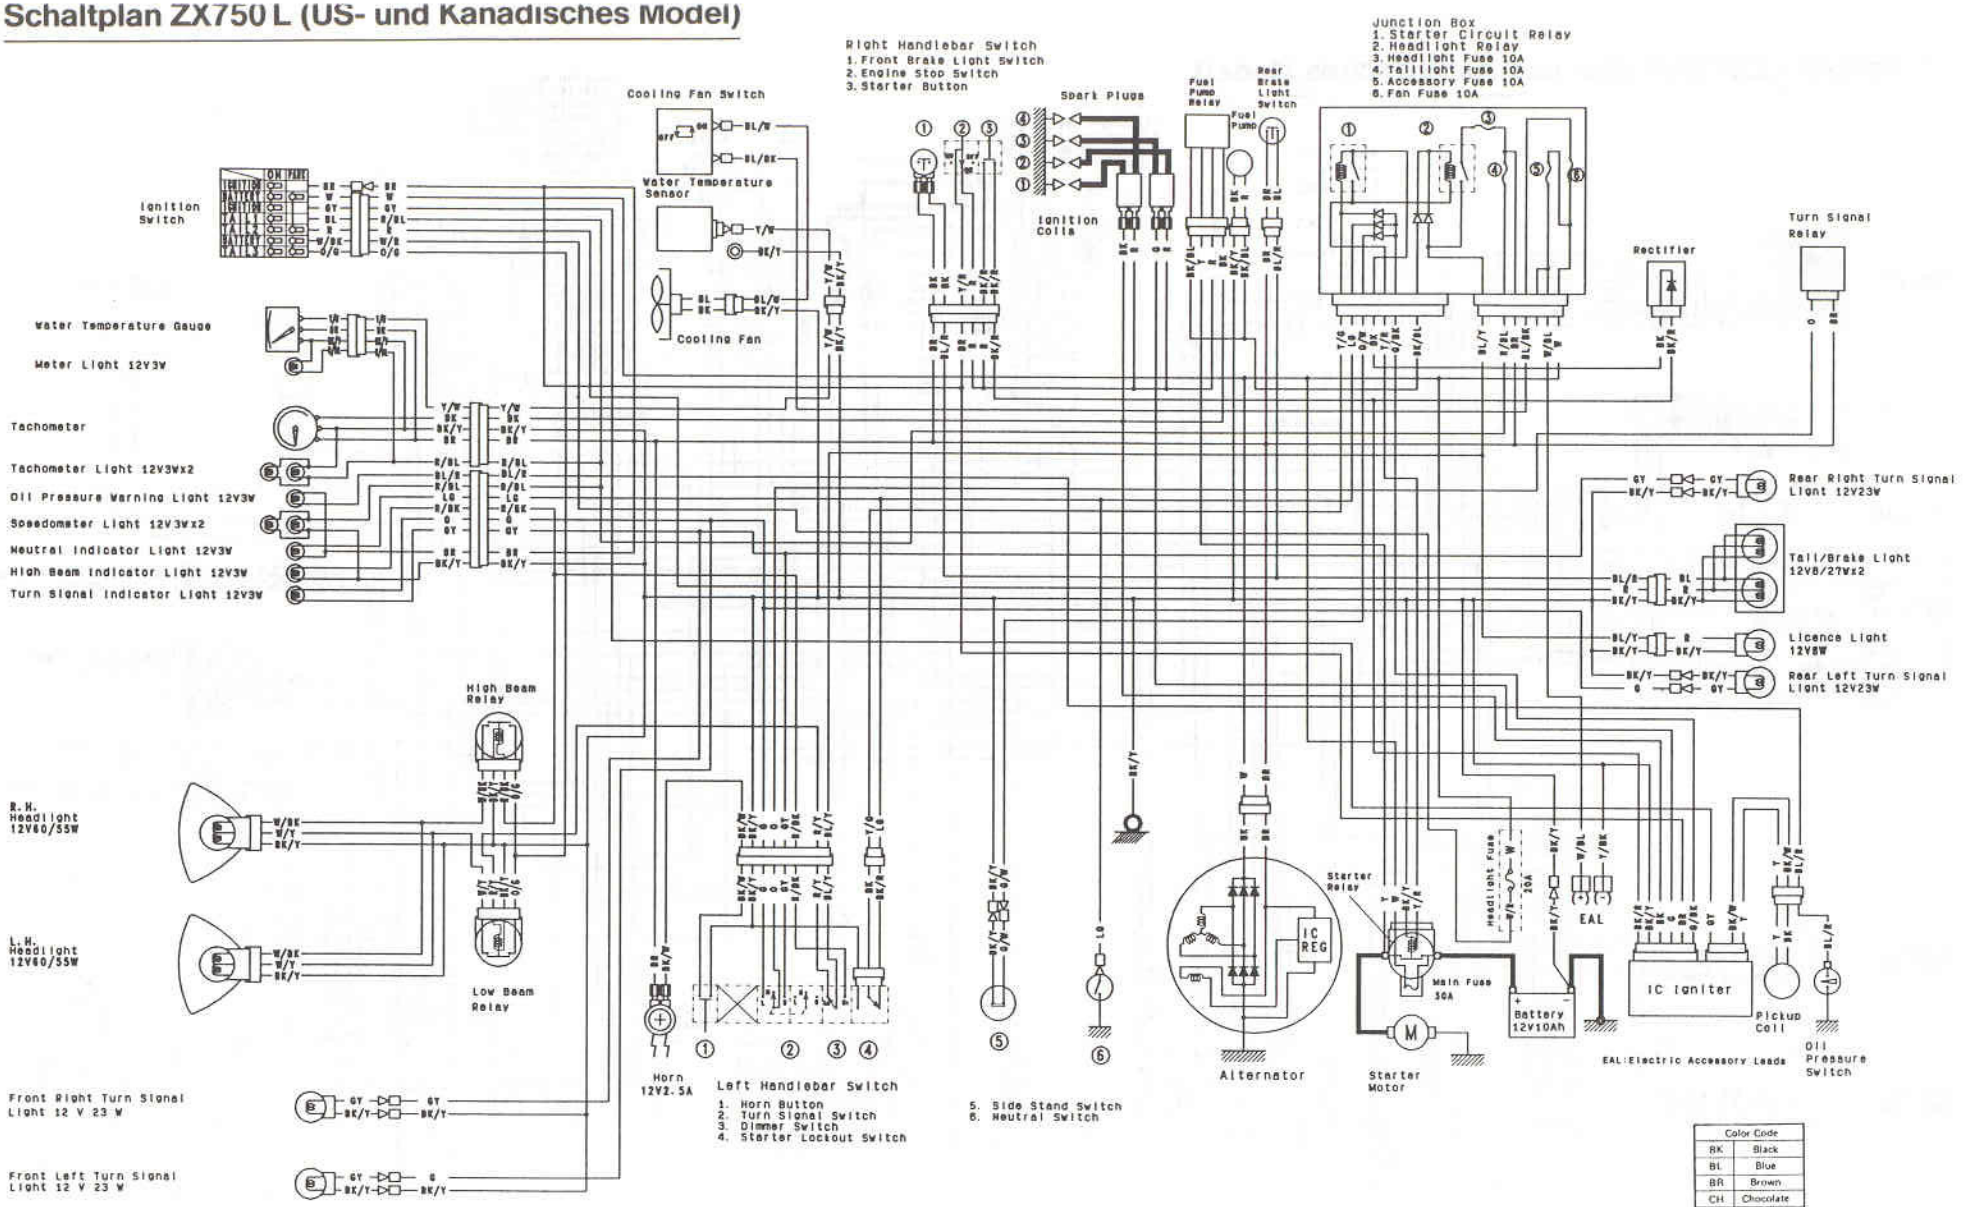

LEFT HANDLEBAR SWITCH CONNECTIONS

Horn Button			Turn Signal Switch				Dimmer Switch				Starter Lockout Switch			
Color	BK/W	BK/Y	Color	G	O	GY	Color	R/Y	BL/Y	R/BK	Color	BK/Y	BK	BK/R
			L				HI				Clutch lever			
Push			OFF (Push)								Released			
			R				LO				Pulled in			

IGNITION SWITCH CONNECTIONS

	Ignition	Battery	Ignition	Tail 1	Tail 2	Battery	Tail 3
Color	BR	W	GY	BL	R	W/BK	O/G
OFF, LOCK							
ON							
PARK							

RIGHT HANDLEBAR SWITCH CONNECTIONS

Front Brake Light Switch			Engine Stop Switch			Starter Button		
Color	BK	BK	Color	Y/R	R	Color	BK/R	BK/R
Brake Lever			OFF					
Pulled In						Push		
			RUN					

(98051-1356B)

Color Code	
BK	Black
BL	Blue
BR	Brown
CH	Chocolate
DG	Dark green
G	Green
GY	Gray
LB	Light blue
LG	Light green
O	Orange
P	Pink
PU	Purple
R	Red
W	White
Y	Yellow